

HOW DOES IT WORK?

- 1. Rainwater flows from rooftop to gutter.
- 2. Accumulated water from gutter will flow through down a customized piping.
- 3. The leaves and other unwated objects will be separated from the water by a leaf separator. (LFS-3)
- 4. First flush piping allow dirty water to flush out. (FFS-4)
- 5. The rainwater will then be stored in an underground / onground tank. (WST-5)
- 6. The water in the tank is ready to use. (WUT-6)
- 7. During usage, the water pump will extract the water from the tank and supply it to the water outlet.
- 8. The water outlet links to pipe for gardening, car wash and etc.
- 9. Excessive water will be flown out to the drain through a overflow pipe.
- 10. Filtering rain water to clean water for toilet purpose. (WSF-10)